


Magic-Pak® V-Series™ Rotary Compressors

We have had reports from the field that in some cases the rotary compressors used in HWC and EWC models are not starting at initial startup. We have seen this occur in low voltage situation. If this condition occurs please check the following:

1. Check to make sure all electrical connections are tight.
2. Check the incoming voltage to make sure it is with in proper range. **(See name plate on unit for proper voltage range).**
3. If voltage is within the proper range while unit is not running make sure the voltage is not dropping below the minimum voltage at compressor startup.

If the above conditions are met and the compressor will not start, the use of a start assist may be needed to operate the compressor. If the compressor will not start after applying the start assist, please contact Technical Service @ 1-800-515-3501.

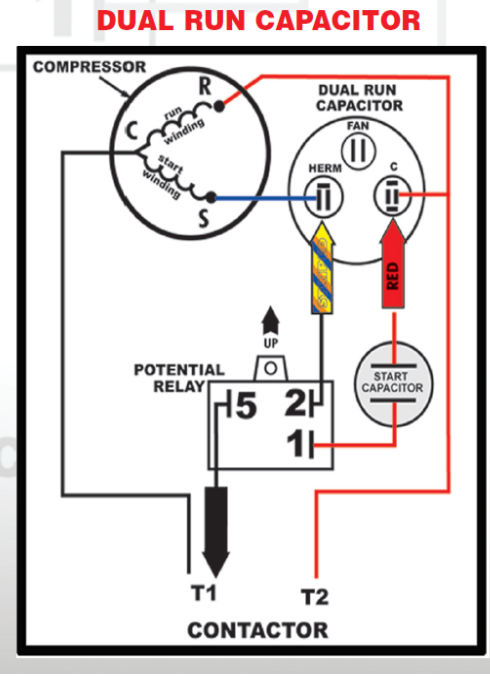

For 1-2-3 Ton Units use the following size start capacitor.
88 to 108 MFD

FOR DEALER DISTRIBUTION